

Motorcycle Manufacturer	
Model	K 1200 RS
Year	<i>II</i>
Issue	01/99 – rev. 00

Recommended siting	Behind the right fairing, under the seat, between the coolant-bottle and the connectors.
Power supply	Connect the positive and the negative supply wires of the alarm system directly to the battery.
Engine immobilisation (1)	Follow diagram B. Cut The GREEN/RED wire that controls the fuel pump relay (the first relay on the right of the rear line). This is available in the relay box placed under the right side of the fuel tank.
Engine immobilisation (2)	Cut the BLACK/YELLOW wire of the starter solenoid available in the relay-box placed under the right side of the fuel tank.
Ignition controlled positive supply	Connect to the GREEN wire available in the red 8-way connector placed in the connector holder, behind the electric fan of the right radiator.
Turn indicators	Connect to the BLUE/BLACK wire and BLUE/RED wire available in the black 6-way connector placed behind the right fairing, under the seat.