


Motorcycle Manufacturer	
Model	R 1150
Issue	01/03 – rev. 00

Recommended siting	Under the tail fairing, behind the tail lamp.
Power supply	Connect the positive and negative supply wires of the security system directly to the motorcycle battery.
Engine immobilisation (1)	Follow diagram B. Cut the GREEN/WHITE wire available in the black 3-way connector that is secured to the frame on the right of the fuse-box.
Engine immobilisation (2)	Cut the BLACK wire that is connected to the starter.
Ignition controlled positive supply	Connect to the GREEN wire available inside the fuse-box, under the seat.
Turn indicators	Connect to the BLUE/BLACK and BLUE/RED wires that are available directly on the rear turn indicators.