


Motorcycle Manufacturer	
Model	NAVIGATOR
Issue	09/00 – rev. 00

Recommended siting	Behind the left side fairing
Power supply	Connect the positive and the negative supply wires of the alarm unit directly to the motorcycle battery.
Engine immobilisation (1)	Follow diagram B. Cut the VIOLET/BLUE wire available in the white 2-way connector placed behind the left side fairing , near the battery.
Engine immobilisation (2)	Cut the ORANGE/GREEN wire available in the black 2-way connector on the starter solenoid. This is available under the top case support, behind the tail light.
Ignition controlled positive supply	Connect to the RED/GREEN wire available in the white 2-way connector on the micro-switch of the rear stop light, placed behind the left side fairing.
Turn indicators	Connect to the LIGHT BLUE wire and RED/BLACK wire of the rear turn indicators. These are available in the white 6-way connector, under the top case support, behind the tail light.