


Motorcycle Manufacturer	
Model	RAPTOR, V RAPTOR
Issue	09/00 – rev. 00

Recommended siting	Under the seat, in the tool compartment, in front of the battery. Cut the fixing wings, then install the system vertically.
Power supply	Connect the positive and the negative supply wires of the alarm system directly to the battery.
Engine immobilisation (1)	Follow diagram B. Cut the VIOLET/BLUE wire in the white 2-way connector placed behind the left side fairing, in front of the voltage regulator.
Engine immobilisation (2)	Cut the ORANGE/GREEN wire available in the black 2-way connector on the starter solenoid, under the seat.
Ignition controlled positive supply	Connect to the RED/GREEN wire in the white 2-way connector on the micro-switch of the rear stop light, available behind the right side fairing.
Turn indicators	Connect to the LIGHT BLUE wire and RED/BLACK wire of the rear turn indicators, placed behind the rear light.