


| | |
|--------------------------------|--|
| Motorcycle Manufacturer |  |
| Model | PREDATOR, ATLANTIS and SENDA |
| Year | // |
| Issue | 04/00 – rev. 00 |

| | |
|--|---|
| Recommended siting | Behind the front shield. |
| Power supply | Connect the positive supply wire of the alarm system to the ORANGE wire and the negative supply wire of the alarm system to the BLUE wire. These wires are available in the 5-way connector on the wiring loom coming out of the ignition lock. |
| Engine immobilisation (1) | Follow diagram A. Connect to the WHITE/BLACK wire in the one-way connector on the loom coming out of the ignition lock. |
| Engine immobilisation (2) | Cut the YELLOW/RED wire available in the loom coming down from the handle-bar. |
| Ignition controlled positive supply | Connect to the GREEN/RED wire in the 5-way connector of the loom coming out of the ignition lock. |
| Turn indicators | Connect to the LIGHT BLUE wire and RED wire available directly on the front turn indicators. |