



| | |
|--------------------------------|------------------------|
| Motorcycle Manufacturer | <i>DUCATI</i> |
| Model | 916/748/996 |
| Issue | 04/99 – rev. 00 |

| | |
|--|---|
| Recommended siting | Over the battery. |
| Power supply | Connect the positive supply wire and the negative supply wire of the alarm system directly to the terminals of the motorcycle battery. |
| Engine immobilisation (1) | Follow diagram B. Cut the BLUE/YELLOW wire available in the 6-way connector of the harness coming out of the ignition lock, behind the battery. |
| Engine immobilisation (2) | Follow diagram B. Cut the BLUE/RED wire of the starter solenoid placed in front of the battery. |
| Ignition controlled positive supply | Connect to the same BLUE/YELLOW wire as used for engine immobilisation 1. |
| Turn indicators | Connect to the WHITE/GREEN wire and WHITE/BLACK wire of the 10-way connector available on the right side of the rear frame. |