


Motorcycle Manufacturer	
Model	NEXUS
Issue	11/03 – Rev. 00

Recommended siting	Above the plastic wall of the fender, between the tail light and the tool compartment under the seat.
Power supply	Connect the positive and negative supply wires of the security unit to the positive and negative terminals of the battery, under the front of the seat.
Engine immobilisation (1)	Performed by the o.e. immobiliser.
Engine immobilisation (2)	Cut the GREEN wire found in the 4-way red connector of the starter solenoid, under the left fairing in front of the battery.
Ignition controlled positive supply	Connect to the YELLOW/BLACK wire available in the white 2-way connector that is attached to the harness powering the number plate light, close to the seat release motor.
Turn indicators	Connect to the PINK and WHITE/BLUE wires of the harnesses powering the rear turn indicators.