


Motorcycle Manufacturer	
Model	FXD DYNA
Issue	7/95 – rev. 00

Recommended siting	Under the seat, on the left side of the battery compartment.
Power supply	Connect the positive and the negative supply wires of the alarm system to the motorcycle's battery.
Engine immobilisation (1)	Follow diagram B. Cut the WHITE wire powering the coil.
Ignition controlled positive supply	Connect to the ORANGE wire of the flasher unit.
Turn indicators	Connect to the BLACK/VIOLET and BLACK/BROWN wires of the rear turn indicators.