


| | |
|--------------------------------|--|
| Motorcycle Manufacturer |  |
| Model | ROAD KING |
| Year | 09/98 |
| Issue | 02/00 – rev. 00 |

| | |
|--|---|
| Recommended siting | Behind the left fairing, on the battery support. |
| Power supply | Connect the positive and the negative supply wires of the alarm system directly to the battery. |
| Engine immobilisation (1) | Follow Diagram B. Cut the WHITE/BLACK wire of the grey 8-way connector placed behind the right fairing. |
| Engine immobilisation (2) | Cut the BLACK/RED wire available in the connector of the starter relay, placed under the seat. |
| Ignition controlled positive supply | Connect to the BLUE wire available in the black 8-way connector placed under the seat. |
| Turn indicators | Connect to the VIOLET wire and BROWN wire of the black 8-way connector placed under the seat. |

IMPORTANT NOTICE: in order to avoid backfeeds to the ignition controlled positive supply, fit a IN5407 diode to the ORANGE/WHITE wire found in the connector of the flasher unit, behind the headlamp. The stripe on the diode should point towards the flasher unit.