

Motorcycle Manufacturer	HONDA
Model	GL 1500 Goldwing
Issue	7/98 – rev. 00

Recommended siting Behind the front fairing, under the front left glove

compartment.

Power supplyConnect the positive supply wire of the alarm system

to the RED wire of the fuse-box that is located vertically on the left side. Connect the negative supply

wire to a bolt on the chassis.

Engine immobilisation (1) Follow diagram B. Cut the BLACK/WHITE wire that is

connected to a 15A fuse in the fuse-box.

Engine immobilisation (2) Follow diagram B. Cut the YELLOW/RED wire found

in the harness that comes out of the right switch.

Ignition controlled positive

supply

Connect to the BLACK wire of the ignition switch.

Turn indicators Connect to the ORANGE and LIGHT BLUE wires of

the harness that comes out of the left switch.