


Motorcycle Manufacturer	 HONDA
Model	HORNET 600 CB
Issue	06/98 – rev. 00

Recommended siting	On the left side of the frame, between the coolant bottle and the intake filter.
Power supply	Connect the positive and the negative supply wires of the alarm system directly to the battery terminals.
Engine immobilisation (1)	Follow diagram B. Cut the BLACK/WHITE wire of the ignition unit found under the seat.
Engine immobilisation (2)	Cut the YELLOW/RED wire found in the red 4-way plug that is connected to the starter solenoid, behind the right fairing.
Ignition controlled positive supply	Connect to the BROWN/BLACK wire of the 10A-fuse available in the fuse-box, near the coolant bottle.
Turn indicators	Connect to the ORANGE wire and LIGHT BLUE wire found in the white 4-way connector located under the ignition unit, under the seat.