


Motorcycle Manufacturer	 HONDA
Model	HORNET 600 CB ym 2007
Issue	02/07 Rev. 00

Recommended siting	Inside the compartment that is available under the tail fairing, behind the tail light.
Power supply	<p>Connect the positive supply wire of the security system to the RED/GREEN wire in the 6-way connector that is secured under the seat in the compartment available under the tail fairing.</p> <p>Connect the negative supply wire of the security system to the GREEN wire in the 6-way connector that is secured under the seat in the compartment available under the tail fairing.</p>
Engine immobilisation (1)	Cut the BROWN/BLACK wire connected to the fuel pump relay (first relay on the right), under the right cowling.
Engine immobilisation (2)	Cut the YELLOW/RED wire available in the 4-way red connector of the starter solenoid, on the right side of the battery.
Ignition controlled positive supply	Connect to the WHITE/BLACK wire available in the 6-way connector that is secured under the seat in the compartment located under the tail fairing.
Turn indicators	Connect to the ORANGE and LIGHT BLUE wires in the 6-way connector that is secured under the seat in the compartment located under the tail fairing.
Remark	To stop backfeeds from the turn indicators it is recommended to fit a diode to the WHITE/GREEN wire available in the 4-way plug that is connected to the flasher unit, under the right rear cowling.