

Motorcycle Manufacturer	HONDA
Model	JAZZ 250
Issue	01/01 – rev. 00

Recommended siting	Under the front shield.
Power supply	Connect the positive supply wire of the alarm system to the RED wire available in the white 3-way connector in the harness that comes out of the ignition lock. The connector is located inside a rubber protection boot. Connect the negative supply wire of the alarm system to an earth screw on the chassis.
Engine immobilisation	Follow Diagram B. Cut the RED/BLACK wire in the white 3- way connector on the loom coming out of the ignition lock. The connector is located inside a rubber protection boot.
Ignition controlled positive supply	Connect to the same RED/BLACK wire as used for Engine Immobilisation .
Turn indicators	Connect to the ORANGE wire and LIGHT BLUE wire available in the white, red or black 9-way connector that is available inside a rubber protection boot.