


| | |
|--------------------------------|---|
| Motorcycle Manufacturer |  HONDA |
| Model | S-WING 125/150 |
| Issue | 06/07 Rev. 00 |

| | |
|--|---|
| Recommended siting | Install the alarm unit under the left or right rear cowling. |
| Power supply | Connect the positive supply wire of the alarm system to the positive terminal of the battery. Connect the negative supply wire of the alarm system to the negative terminal of the battery. The battery is located inside the storage compartment under the seat, behind the plastic wall on the right side. |
| Engine immobilisation (1) and (2) | Follow Diagram B. Cut the BLACK wire available in the 3-way black connector (with a grey sleeve) that is secured to the plastic plug-holder on the right side, behind the tail light. |
| Ignition controlled positive supply | Connect to the BROWN/BLACK wire available in the white 4-way connector that is secured to the plastic plug-holder on the right side, behind the tail light. |
| Turn indicators | Connect one wire to the LIGHT BLUE wire available in the 4-way white connector that is secured to the plastic plug-holder on the right side; connect the other wire to the ORANGE wire available in the black 4-way connector that is secured to the plastic plug-holder on the left side. Both connectors are behind the tail light. |

NOTE: if you wish to protect the seat against unauthorised opening, connect the **BLUE** wire (or wire n. 4) of the alarm system to the **TURQUOISE** wire available in the 3-way white plug connected to the harness that comes out of the courtesy light in the storage compartment under the seat.