




<b>Motorcycle Manufacturer</b>	 <b>HONDA</b>
<b>Model</b>	<b>TRANSALP 600</b>
<b>Issue</b>	<b>12/96 – rev. 00</b>

<b>Recommended siting</b>	On the right side of the instruments.
<b>Power supply</b>	Connect the positive supply wire of the alarm system to the RED wire of the 4-way red connector on the right of the instruments. Connect the negative supply wire to the GREEN wire with SILVER dots of the white 2-way connector on the right of the instruments.
<b>Engine immobilisation (1)</b>	Follow diagram B. Cut the BLACK/RED wire of the 6-way connector located on the right of the instruments.
<b>Engine immobilisation (2)</b>	Follow diagram B. Cut the YELLOW/RED wire of the 6-way connector located on the right of the instruments.
<b>Ignition controlled positive supply</b>	Connect to the RED/BLACK wire of the 4-way red connector located on the right of the instruments.
<b>Turn indicators</b>	Connect to the ORANGE and LIGHT BLUE wires of the 9-way connector on the left of the instruments.