


Motorcycle Manufacturer	 HONDA
Model	TRANSALP ym 2000 >
Issue	03/00 – rev. 00

Recommended siting	Under the front fairing, in front of the instruments.
Power supply	Connect the positive supply wire of the alarm system to the RED cable in the red 4-way connector on the right of the instruments. Connect the negative supply wire of the alarm system to the GREEN wire in the white 9-way connector, placed on the connector-holder on the left of the instrument board.
Engine immobilisation (1)	Follow Diagram B. Cut the BLACK/RED wire or the BLACK/WHITE available in the 6-way connector on the right of the instruments.
Engine immobilisation (2)	Cut the YELLOW/RED wire available in the 6-way connector, on the right of the instruments.
Ignition controlled positive supply	Connect to the RED/BLACK wire available in the red 4-way connector, on the right of the instruments.
Turn indicators	Connect to the ORANGE wire and to the LIGHT BLUE wire available in the 9-way connector on the right of the instruments.