


Motorcycle Manufacturer	 HONDA
Model	VTR 1000
Issue	04/98 – rev. 00

Recommended siting	On the right side of the rear frame.
Power supply	Connect the positive supply wire and the negative supply wire of the alarm system to the battery terminals.
Engine immobilisation (1)	Follow Diagram B. Cut the BLACK/WHITE wire of the 6-way plug that is connected to the control unit placed behind the tail light.
Engine immobilisation (2)	Follow Diagram B. Cut the YELLOW/RED wire found in the 4-way red connector of the starter solenoid.
Ignition controlled positive supply	Connect to the WHITE/GREEN wire of the 2-way connector available behind the battery on the right side of the fuse box.
Turn indicators	Connect to the ORANGE and LIGHT BLUE wires of the rear turn indicators.