



Motorcycle Manufacturer	Kawasaki
Model	ER 5
Year	//
Issue	06/99 – rev. 00

Recommended siting	Install the alarm system behind the left fairing.
Power supply	<p>Connect the positive supply wire of the alarm system to the BLUE/BLACK wire coming out of the 10A-fuse and marked FUN. This fuse is available in the fuse-box, under the seat.</p> <p>Connect the negative supply wire of the alarm system to the negative terminal of the battery.</p>
Engine immobilisation (1)	Follow Diagram B. Cut the BROWN/WHITE wire coming out of the 10A-fuse and marked IG. This fuse is available in the fuse-box, under the seat.
Ignition controlled positive supply	Connect to the BROWN wire entering the 10A-fuse and marked TURN. This fuse is available in the fuse-box, under the seat.
Turn indicators	Connect to the GREEN wire and GREY wire available in the loom of the rear light. This wiring harness is placed on the left of the frame, behind the fairing.