



## MOTORCYCLE MODEL-SPECIFIC FITTING INSTRUCTIONS


REV. 00

[www.cobra-at.com](http://www.cobra-at.com)

MAKE **KAWASAKI** MOD. **ZX10-R** YEAR **08**

### WIRING TIPS FOR SPYBALL IMMOBILISER/ALARM SYSTEM

- RECOMMENDED SITING** Secure the alarm unit under the rear right fairing, on the right of the relay-box, between the front seat and the rear seat.
- ORIGINAL PREWIRING** //
- POWER SUPPLY** **+30:** Connect the positive supply wire of the security system to the positive terminal of the motorcycle battery.  
**-31:** Connect the negative supply wire of the security system to the negative terminal of the motorcycle battery.
- IGNITION CONTROLLED POS. POWER SUPPLY** **+15/54:** Connect to the RED wire available in the black 2-way plug that is connected to the harness of the number plate light, under the rear right fairing on the right of the storage compartment.
- TURN INDICATORS** Connect to the GREEN and GREY wires available in the 2-way grey and black connectors of the rear turn indicators, under the rear right fairing on the right of the storage compartment.
- ENGINE CUT** Follow diagram B. Cut the BROWN/YELLOW wire available in the 8-way grey plug that is connected to the relay-box, under the fairing between the front seat and the rear seat.  
**While the engine is running, measure the value of the electrical current in the circuit that has been cut, to make sure that it does not exceed the technical specifications of the product.**  
**Install an additional relay if necessary.**
- CRANK INHIBITION** **+50:** Cut the YELLOW/RED wire that is available in the 4-way red connector of the starter solenoid, on the right of the battery.  
**During the cranking phase, measure the value of the electrical current in the circuit that has been cut, to make sure that it does not exceed the technical specifications of the product.**  
**Install an additional relay if necessary.**
- REMARKS** To stop backfeeds through the turn indicators, it is recommended to fit a diode to the BROWN/YELLOW wire available in the connector of the flasher unit, under the fairing, between the front seat and the rear seat, on the left of the relay-box.

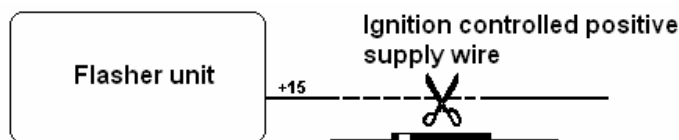

### WIRING TIPS FOR BIKERSAT SATELLITE SECURITY SYSTEM

**POSITION OF THE GPS ANTENNA** //