

Motorcycle Manufacturer	Kawasaki
Model	ZZR 1200
Issue	04/02 – rev. 00

Recommended siting	Under the tail fairing, between the tail light and the tool compartment.
Power supply	Connect the positive and negative power supply wires of the alarm system directly to the positive and negative terminals of the motorcycle's battery.
Engine immobilisation (1)	Follow diagram B. Cut the RED wire that is available in the black 4-way plug connected to the harness coming out of the fuel pump, under the tank.
Engine immobilisation (2)	Cut the YELLOW/RED wire available in the red 4-way plug that is connected to the starter solenoid, under the right fairing.
Ignition controlled positive supply	Connect to the RED/WHITE wire found in the white 2-way plug connected to the harness of the rear stop switch, under the right fairing.
Turn indicators	Connect to the GREEN and GREY wires found in the white 6-way connector located under the seat on the right of the tool compartment.

Remark: to avoid backfeeds through the turn indicators, it is recommended to fit a diode to the BROWN/YELLOW wire found in the plug that is connected to the flasher unit. The latter is sited under the tank in front of the battery.

