



Motorcycle Manufacturer	<i>Malaguti</i>
Model	CROSSER, FIRE FOX and CIAK 125/150
Issue	09/03

Recommended siting

Behind the front shield.

Power supply

Connect the positive supply wire of the alarm system to the BLUE/RED wire and the negative supply wire to the BLACK wire both available in the connector of the harness that comes out of the ignition lock.

Engine immobilisation (1)

Follow diagram A. Connect to the WHITE/BLACK wire available in the connector of the harness that comes out of the ignition lock.

Engine immobilisation (2)

Follow diagram B. Cut the WHITE/RED wire in the harness that comes out of the right switch.

Ignition controlled positive supply

Connect to the BLUE wire available in the connector of the harness that comes out of the ignition lock.

Turn indicators

Connect to the GREEN and VIOLET wires found in the 2-way white connector that is sited close to the connector of the ignition lock.