

Motorcycle Manufacturer	motion
Model	STING 50 cc
Issue	06/98

Recommended position Behind the front shield, near the o.e.warning horn.

Power supplyConnect the positive supply wire of the alarm system

to the RED wire and the negative supply wire to the BLACK wire found in the harness that comes out of

the ignition lock.

Engine immobilisation (1) Follow diagram A. Connect to the WHITE/BLACK wire

of the harness that comes out of the ignition lock.

Ignition controlled positive

supply

Connect to the BROWN wire found in the harness that

comes out of the ignition lock.

Turn indicators Connect to the GREEN and BROWN wires of the front

turn indicators.