


Motorcycle Manufacturer	
Model	F 4
Issue	03/2000 – rev. 00

Recommended siting	Under the rear fairing, in the tool compartment. It is recommended to install the alarm system using distance washers to avoid contact with the exhaust system and subsequent overheating.
Power supply	Connect the positive and the negative supply wires of the alarm system directly to the positive and the negative terminals of the battery.
Engine immobilisation (1)	Follow diagram B. Cut the YELLOW/RED wire in the connector of the fuel pump relay, placed under the right side of the tail fairing.
Engine immobilisation (2)	Cut the ORANGE/BLACK wire available on the starter solenoid, found behind the left fairing, near the alternator.
Ignition controlled positive supply	Connect to the GREY/WHITE wire available on the mid relay placed behind the left fairing, near the alternator.
Turn indicators	Connect to the RED/BLACK wire and LIGHT BLUE wire available in the connectors placed under the tail fairing, on the right.