


Motorcycle Manufacturer	 SUZUKI
Model	BANDIT
Issue	06/01 Rev. 00

Recommended siting	Install the alarm system under the rear right fairing.
Power supply	Connect the positive and the negative supply wires of the alarm system directly to the positive and to the negative terminals of the battery.
Engine immobilisation (1)	Follow diagram B. Cut the ORANGE/WHITE wire available in the black 4-way connector of the electronic control unit, under the rear left fairing.
Engine immobilisation (2)	Cut the BLACK/YELLOW wire available in the 4-way connector of the starter solenoid, placed under the left side fairing, on the left of the battery.
Ignition controlled positive supply	Connect to the ORANGE/GREEN wire available in the connector of the fuse-box holder, placed behind the rear lamp, on the right.
Turn indicators	Connect to the BLACK wire and to the LIGHT GREEN wire available in the 2-way connectors placed behind the rear lamp.

Remark: to avoid backfeeds through the turn indicators, it is recommended to fit a diode to the ORANGE/GREEN wire that is connected to the flasher unit. The latter is attached to the fuse-box, behind the tail light (same wire as the ignition controlled positive supply wire is connected to).

