

<b>Motorcycle Manufacturer</b>	 <b>SUZUKI</b>
<b>Model</b>	<b>GSX-R 600 / 750 ym '99 &gt;</b>
<b>Issue</b>	<b>06/99 Rev. 01</b>

<b>Recommended siting</b>	Under the right fairing, on the right of the battery.
<b>Power supply</b>	Connect the positive and the negative supply wire of the alarm system directly to the battery terminals.
<b>Engine immobilisation (1)</b>	Follow diagram B. Cut the LIGHT BLUE/WHITE wire available in the white 2-way connector, placed behind the left fairing, on the left of the battery.
<b>Engine immobilisation (2)</b>	Cut the YELLOW/GREEN wire available in the 4-way connector of the starter solenoid, placed under the left fairing, in front of the regulator.
<b>Ignition controlled positive supply</b>	Connect to the ORANGE/GREEN wire available in the 2-way connector found on the micro-switch that controls the lighting of the stop light.
<b>Turn indicators</b>	Connect to the BLACK wire and LIGHT GREEN wire of the rear turn indicators.