


Motorcycle Manufacturer	 SUZUKI
Model	TL 1000
Issue	05/99

Recommended siting	Under the seat, on the right of the tool compartment.
Power supply	Connect the positive supply wire of the alarm system to the ORANGE/BLUE wire available in the 4-way connector on the relay placed under the front seat. Connect the negative supply wire of the alarm system directly to the battery negative terminal.
Engine immobilisation (1)	Follow diagram B. Cut the ORANGE/WHITE wire available in the 4-way connector of the fuel pump relay, placed under the front seat.
Engine immobilisation (2)	Cut the YELLOW/BLACK wire available in the yellow 13-way connector placed behind the fairing of the front left turn indicator, on the left of the headlamp.
Ignition controlled positive supply	Connect to the BLACK/BLUE wire available in the yellow 13-way connector placed behind the front left turn indicator, on the left of the headlamp.
Turn indicators	Connect to the BLACK wire and LIGHT GREEN wire available in the loom placed under the seat, behind the left fairing.