

Motorcycle Manufacturer	SUZUKI	
Model	ZZ 50 and AJ 50	
Issue	7/98	

**Recommended siting** Under the front shield.

Power supply	Connect the positive supply wire of the alarm system
	to the RED wire and the negative supply wire to the WHITE/BLACK wire of the connector of the ignition lock.

- **Engine immobilisation (1)** Follow diagram A. Connect to the BLACK/RED wire of the connector in the harness of the ignition lock.
- **Engine immobilisation (2)** Follow diagram B. Cut the YELLOW/GREEN wire of the 9-way black connector placed under the instruments.
- Ignition controlled positive<br/>supplyConnect to the ORANGE wire of the connector in the<br/>harness of the ignition lock.
- Turn indicatorsConnect to the LIGHT GREEN and BLACK wires of<br/>the front turn indicators.