

| Motorcycle Manufacturer | SYM |
|-------------------------|-------------------|
| Model | SUPER DUKE 150 cc |
| Issue | 02/00 - Rev. 00 |

| Recommended siting | Behind the front shield, on the right. |
|-------------------------------------|---|
| Power supply | Connect the positive supply wire of the alarm system to the RED wire and the negative supply wire to the GREEN wire available in the white 4-way connector that comes out of the ignition lock. |
| Engine immobilisation (1) | Follow diagram A. Connect to the BLACK/WHITE wire available in the white 4-way connector, available at the exit of the ignition lock. |
| Engine immobilisation (2) | Cut the YELLOW/RED wire available in the red 6-way connector, placed behind the front shield. |
| Ignition controlled positive supply | Connect to the BLACK wire available in the white 4-way connector, at the exit of the ignition lock. |
| Turn indicators | Connect to the GREY wire and ORANGE wire available in the red 6-way connector found behind the front shield. |