



Motorcycle Manufacturer	
Model	SPEED TRIPLE 2005
Issue	03-05 – rev. 00

Recommended siting	Inside the tool compartment under the seat, between the battery and the tail lamp.
<i>The bike is pre-equipped with a plug for the connection of a security system. This is located inside the tool compartment under the seat, on the right side of the battery. Unplug the 12-way female connector housing with male terminals that bears two jumper wires and connect as follows:</i>	
Power supply	Connect the RED wire of the loom to the wire in pos. 6 and the BLACK wire of the loom to the wire in pos.12 of the 12-way connector.
Engine immobilisation (1)	Connect the BROWN wire of the loom to the wire in pos. 1 and the VIOLET wire of the loom to the wire in pos. 2 of the 12-way connector
Engine immobilisation (2)	Connect one of the WHITE/GREEN wires of the loom to the wire in pos. 3 and the other WHITE/GREEN wire of the loom to the wire in pos. 5 of the 12-way connector.
Ignition controlled positive supply	Connect the ORANGE wire of the loom to the wire in pos. 4 of the 12-way connector.
Turn indicators	Connect one of the YELLOW wires of the loom to the wire in pos. 7. Connect the other YELLOW wire of the loom to the wire in pos. 8 of the 12-way connector.

LED connection:

- Connect the BROWN/WHITE wire of the loom to the wire in pos. 10 of the 12-way connector, then make a jumper connection between pos.11 and pos. 6 of the 12-way connector.
- Connect the BLACK or BROWN wire of the LED to the GREY wire in pos. 1 and the RED wire of the LED to the ORANGE wire in pos. 2 of the black 2-way free connector that is located under the instruments (pre-wiring).