 



Motorcycle Manufacturer	YAMAHA
Model	FAZER 1000
Issue	03/02 Rev. 00

This model is originally equipped with three plugs for the connection of a security system.


Recommended siting	Fit the alarm unit inside the tool compartment under the seat.	
Position of the o.e. plugs	On the left of the fuse-box, under the seat.	
	IMPORTANT: remove the original jumper connectors!	

 Connect as detailed herebelow. The plugs are viewed from the back side (wire side):






Pin n.	Function	Connect to alarm wire
1	Main positive supply + 12V	Red
2	Ignition controlled positive supply + 15	Orange
3	Negative supply	Black

 



Pin n.	Function	Connect to alarm wire
1	Engine immobilisation (starter solenoid)	Green/White
2	Flashing of left turn indicator	Yellow
3	Engine immobilisation (starter solenoid)	Green/White
4	Flashing of right turn indicator	Yellow

 



Pin n.	Function	Connect to alarm wire
1	Engine immobilisation	Violet
3	Engine immobilisation	Brown

To avoid backfeeds through the turn indicators, it is recommended to fit a diode to the BROWN wire found in the 3-way plug that is connected to the flasher unit, behind the battery, on the right of the starter solenoid, under the seat.

