
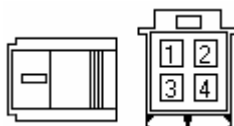


Motorcycle Manufacturer	 <b>YAMAHA</b>
Model	FZ1 FAZER
Issue	05/07

This model is originally equipped with two plugs for the connection of a security system.

Recommended siting of the alarm unit	Inside the storage compartment under the seat.
Siting of the original plugs for connection of the alarm	Under the fuel tank on the right of the fuel pump.

Connect as detailed herebelow. The plugs are viewed from the back side (wire side):



Pin n.	Function	Connect to alarm wire
1	Ignition controlled positive supply (+15)	Orange
2	Flashing of left turn indicator	Yellow
3	Negative supply	Black
4	Flashing of right turn indicator	Yellow



Pin n.	Function	Connect to alarm wire
1	DO NOT CONNECT	
2	Main positive supply (+12V)	Red

Engine immobilisation (2)	Cut the BLUE/WHITE wire found in the 4-way white connector of the starter solenoid, under the front seat behind the battery, on the right side.
---------------------------	---

To stop backfeeds through the turn indicators, it is recommended to fit a diode to the BLUE/RED wire found in the 3-way plug that is connected to the flasher unit, under the rear seat on the right of the storage compartment.

