


<b>Motorcycle Manufacturer</b>	 <b>YAMAHA</b>
<b>Model</b>	<b>MAJESTY 125</b>
<b>Issue</b>	<b>10/98 – rev. 00</b>

<b>Recommended siting</b>	Under the front shield.
<b>Power supply</b>	Connect the positive supply wire of the alarm system to the RED wire and the negative supply wire of the alarm system to the BLACK wire of the white 3-way connector available near the steering post, on the left of the ignition lock.
<b>Engine immobilisation (1)</b>	Follow Diagram A. Connect to the WHITE/BLACK wire of the one-way connector available at the exit of the ignition lock.
<b>Engine immobilisation (2)</b>	Cut the LIGHT BLUE/WHITE bridge of the white 2-way connector available near the steering post, on the left of the ignition lock.
<b>Ignition controlled positive supply</b>	Connect to the BROWN wire of the white 3-way connector available near the steering post, on the left of the ignition lock.
<b>Turn indicators</b>	Connect to the GREEN wire and BROWN wire of the black 2-way connector available near the steering post, on the left of the ignition lock.