
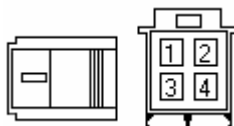


<b>Motorcycle Manufacturer</b>	 <b>YAMAHA</b>
<b>Model</b>	<b>R1 ym 04</b>
<b>Issue</b>	<b>04/04 Rev. 00</b>


This model is originally equipped with two plugs for the connection of a security system.

<b>Recommended siting of the alarm unit</b>	Under the front seat.
<b>Siting of the original plugs for connection of the alarm</b>	Behind the rear left fairing, under the front seat.

Connect as detailed herebelow. The plugs are viewed from the back side (wire side):



Pin n.	Function	Connect to alarm wire
1	Ignition controlled positive supply (+15)	Orange
2	Flashing of left turn indicator	Yellow
3	Negative supply	Black
4	Flashing of right turn indicator	Yellow

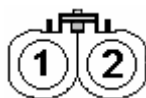

Pin n.	Function	Connect to alarm wire
1	DO NOT CONNECT	
2	Main positive supply (+12V)	Red

<b>Engine immobilisation (2)</b>	Cut the BLUE/WHITE wire found in the 4-way connector of the starter solenoid,. Connect the GREEN/WHITE wires of the alarm system to the two ends you have obtained.
----------------------------------	---

To avoid backfeeds through the turn indicators, it is recommended to fit a diode to the BROWN/WHITE wire found in the 3-way plug that is connected to the flasher unit.

