

Motorcycle Manufacturer	YAMAHA
Model	WHY 50
Issue	10/98 – rev. 00

Recommended siting	Under the front shield.
Power supply	Connect the positive supply wire of the alarm system to the RED wire of the 4-way connector coming out of the ignition lock. Connect the negative supply wire of the alarm system to the BLACK wire of the 4-way connector coming out of the ignition lock.
Engine immobilisation (1)	Follow Diagram A. Connect to the BLACK/WHITE wire of the single connector that comes out of the ignition lock.
Engine immobilisation (2)	Cut the LIGHT BLUE/WHITE wire available in the harness that comes down from the handle-bar, near the steering post.
Ignition controlled positive supply	Connect to the BROWN wire of the 4-way connector coming out of the ignition lock.
Turn indicators	Connect to the GREEN wire and BROWN wire available in the wiring harness that comes down from the handle-bar, near the steering post.