
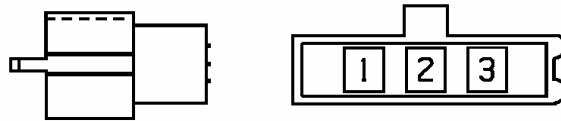


<b>Motorcycle Manufacturer</b>	 <b>YAMAHA</b>
<b>Model</b>	<b>ALL MODELS as from 1998</b>
<b>Issue</b>	<b>04/98 – rev. 00</b>

Yamaha have equipped the models manufactured as from 1998 with specific plugs for the connection of an alarm system. Use them as follows:

**Recommended siting** Install the alarm unit close to the above mentioned connectors.



*View of the back side (wire side)*


PIN N.	FUNCTION	COLOUR OF THE ALARM WIRE TO BE CONNECTED
1	Main positive supply	Red
2	Ignition controlled positive supply	Orange
3	Negative supply	Black



*View of the back side (wire side)*

PIN N.	FUNCTION	COLOUR OF THE ALARM WIRE TO BE CONNECTED
1	Engine immobilisation	Green/White
2	Flashing of the turn indicators	Yellow
3	Engine immobilisation	Green/White
4	Flashing of the turn indicators	Yellow

**Remove the original jumper connector**

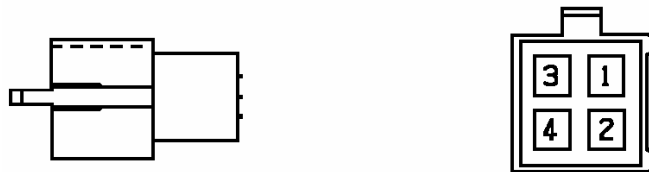

*View of the back side (wire side)*

PIN N.	FUNCTION	COLOUR OF THE ALARM WIRE TO BE CONNECTED
1	Engine immobilisation	Violet
3	Engine immobilisation	Brown

**Remove the original jumper connector**