

RR451 WIRING SCHEME FOR 2 WIRE ALTERNATOR (MOST COMMON SCHEME)

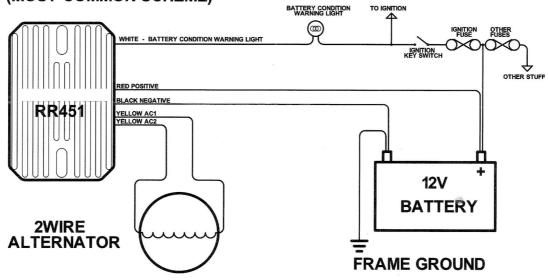

ALTERNATIVE RR451 WIRING SCHEME FOR 3 WIRE ALTERNATOR

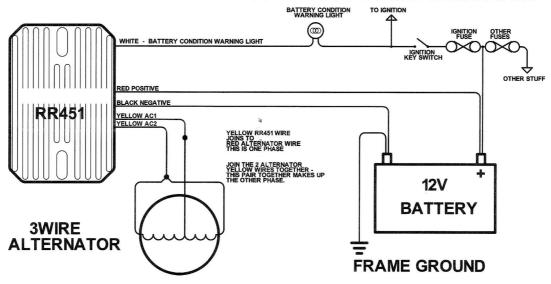

Problems with poor charging are usually caused by poor connections, or by not connecting **RED POSITIVE** & **BLACK NEGATIVE** wires DIRECTLY to the battery.

Please SOLDER all crimp connections after crimping.